


# WIRING DIAGRAM - 725DT<sup>6</sup>

Item No.	Order No.	Description	Item No.	Order No.	Description
	605890	Wiring Assembly		162341	Decal - Fuse
	161146	Decal – Console	18	181456	Fuse 30 Amp Auto ATM
1	141165	Coolant Temperature Gauge		181453	Fuse 15 Amp Auto ATM
2	141203	Voltmeter Gauge		181452	Fuse 10 Amp Auto ATM
3	182327	Oil Indicator Light		181451	Fuse 7.5 Amp Auto ATM
4	182328	Temperature Indicator Light	19	141122	Hour Meter / Fuel Gauge
5	182325	Battery Indicator Light	20	183894	Brake Switch
6	182326	Brake Indicator Light	21	180130	Battery – 12V
7	184179	Light Switch		243309	Bolt .375-16 x .375 Washer Head
8	183925	Clutch Switch	22	180313	Battery Cable 14"
9	183827	Ignition Switch		425223	Battery Terminal Boot
	101106	Key Ignition - Double Notch Kubota		425219	Starter Terminal Boot
10	183860	Safety Switch – Rt. Steering		425215	Alternator Terminal Boot
	720160	Rt. Steering Switch Mount	23	180282	Ground Cable 20"
11	183860	Safety Switch – Lt. Steering	24	184217	Module – Switch Interlock
	720161	Lt. Steering Switch Mount	25	141224	Temperature Sender
12	182262	Worklamp - LED Mini	26	423690	Spacer - PC Board Support
13	141625	Receptacle - USB Charging	27	101046	Fuel Solenoid
	141626	Cap - USB Receptacle	28	388840	Cable Assembly
	141627	Plug - USB Receptacle	29	184973	Weather Pack Connector (Opt.)
14	604880	Regulator Fuse Inline Holder	30	722748	Mount - Tilt Switch (Optional)
	181475	Fuse 40 Amp Auto	31	144950	Hydraulic Solenoid (Optional)
15	183871	Seat Safety Switch	32	183710	Tilt Switch (Optional)
16	184266	Relay	33	183940	Push Button Switch (Optional)
17	181725	Fuse Block ATM		183954	Toggle Switch (Optional)
	181726	Cover - Fuse Block	34	184907	2 Terminal Connector
	270821	Bolt - Hex Flange M6		141236	Fuel Sender - Electric
	184985	Cable Seal 5mm			
	184986	Cavity Plug 6.2mm			

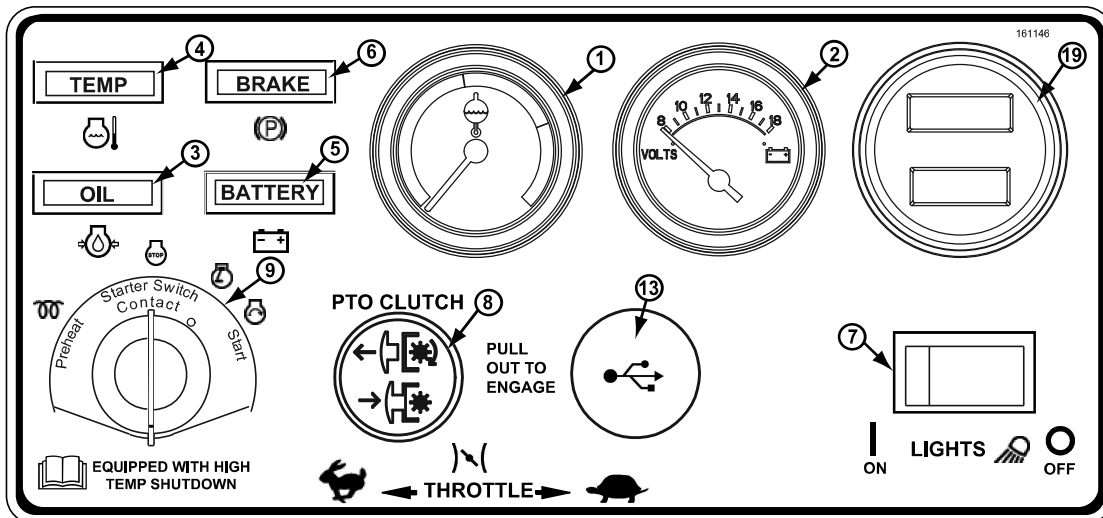

# WIRING DIAGRAM - 725DT<sup>6</sup>

